

FactoryTalk Recommended Architecture


Single FactoryTalk Application with a single WIN-911 system

What's Required?

- (1) WIN-911 License
- +
- (1) WIN-911/FT add-on

WIN-911

Supervisory Network

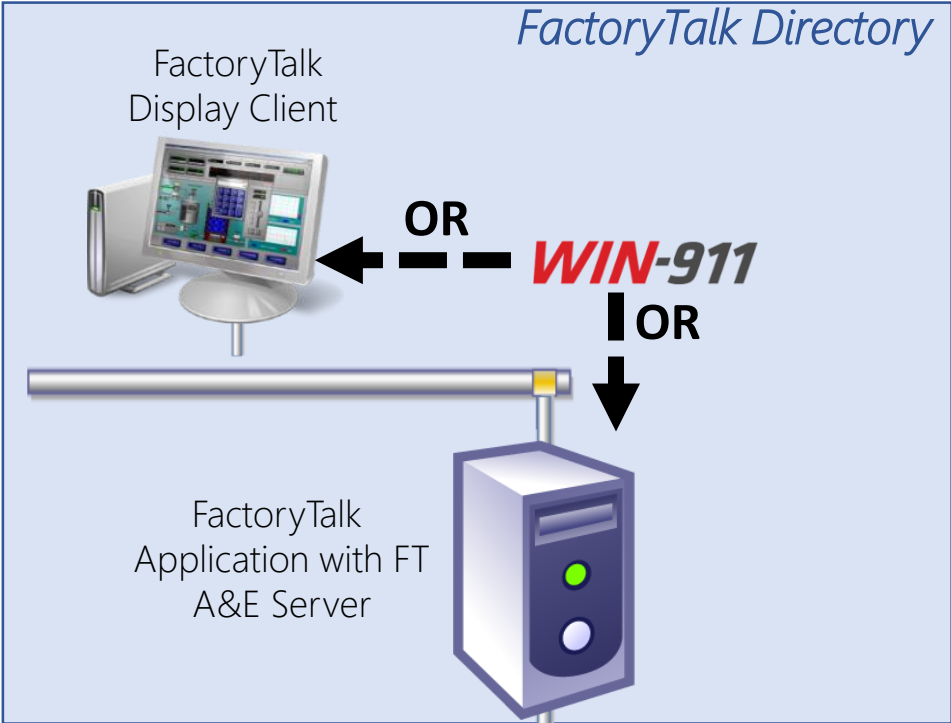

Field Network



FactoryTalk

WIN-911 can be installed on any FT server, display client, or PC within the same FactoryTalk directory as the Application.


FactoryTalk Recommended Architecture

Redundant FactoryTalk Application with a single WIN-911 system

What's Required?

- (1) WIN-911 License
- +
- (1) WIN-911/FT add-on

WIN-911

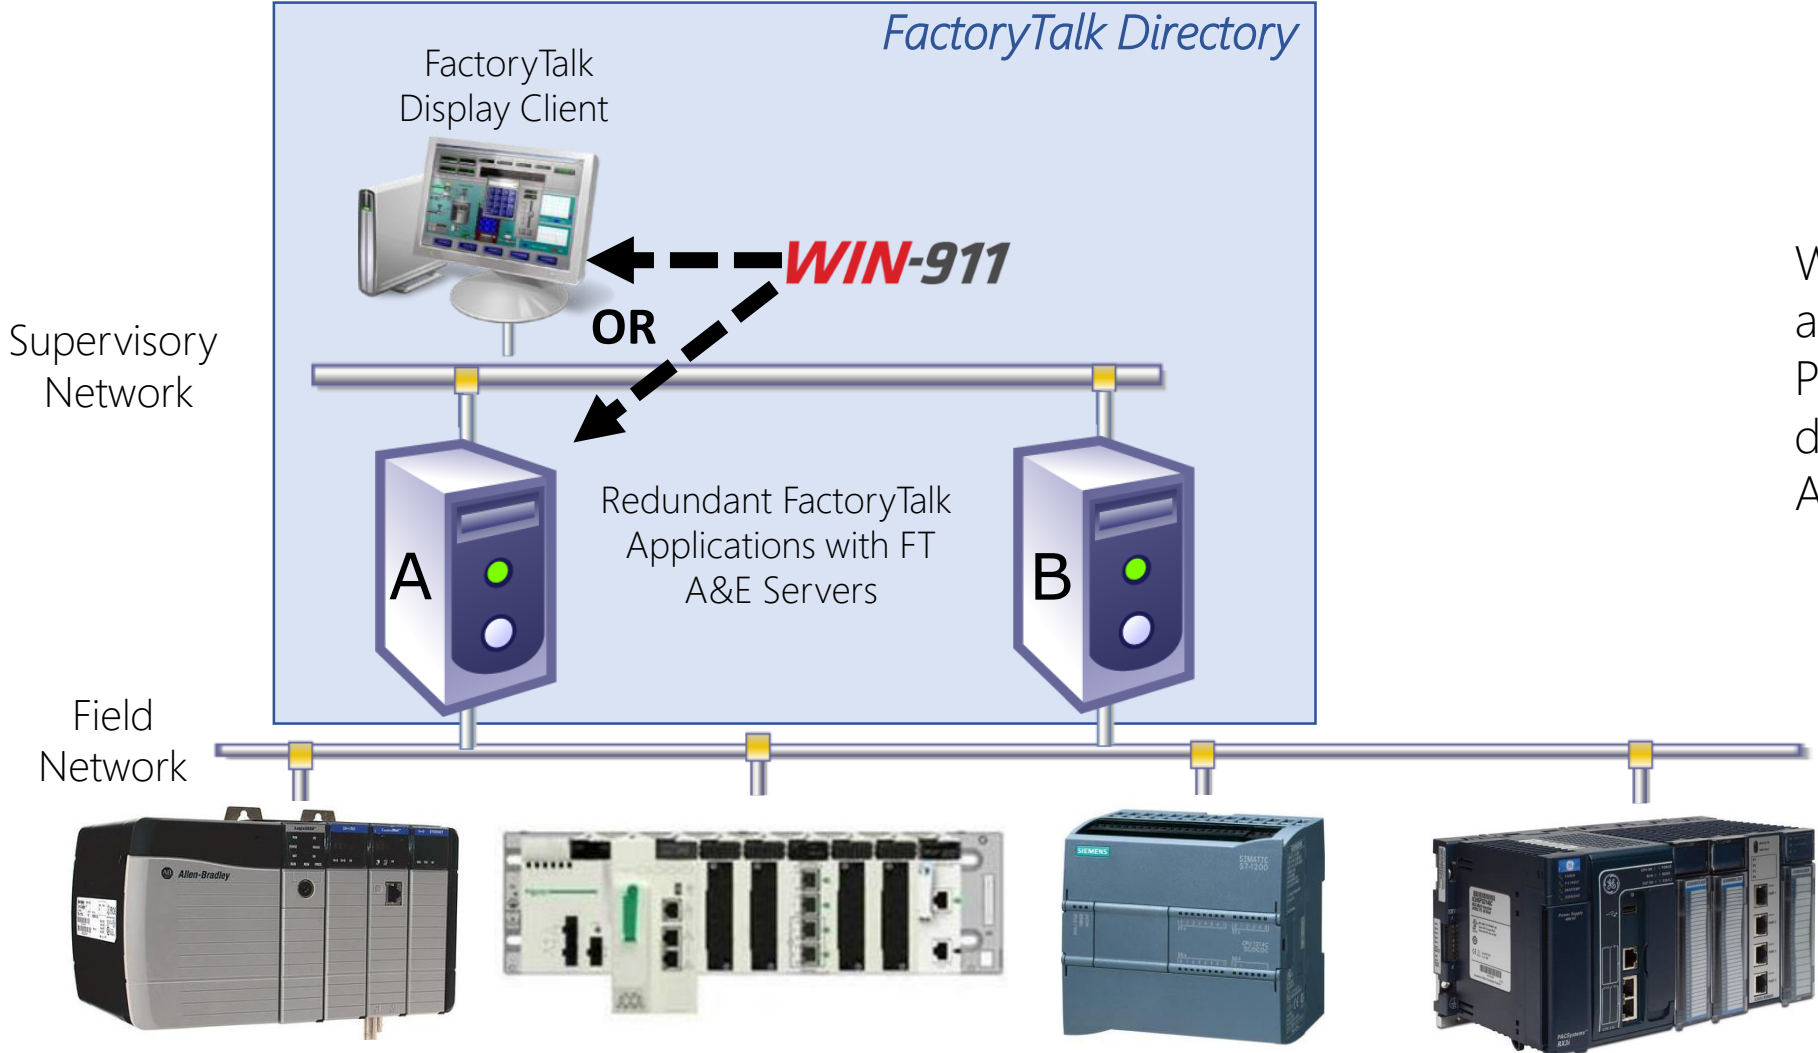

WIN-911 can be installed on any FT server, display client, or PC within the same FactoryTalk directory as the Redundant Application.

FactoryTalk


FactoryTalk Recommended Architecture

Two separate FactoryTalk Applications with a single WIN-911 system

What's Required?

- (1) WIN-911 License
- +
- (1) WIN-911/FT add-on
- +
- (1) WIN-911/Nodes

WIN-911

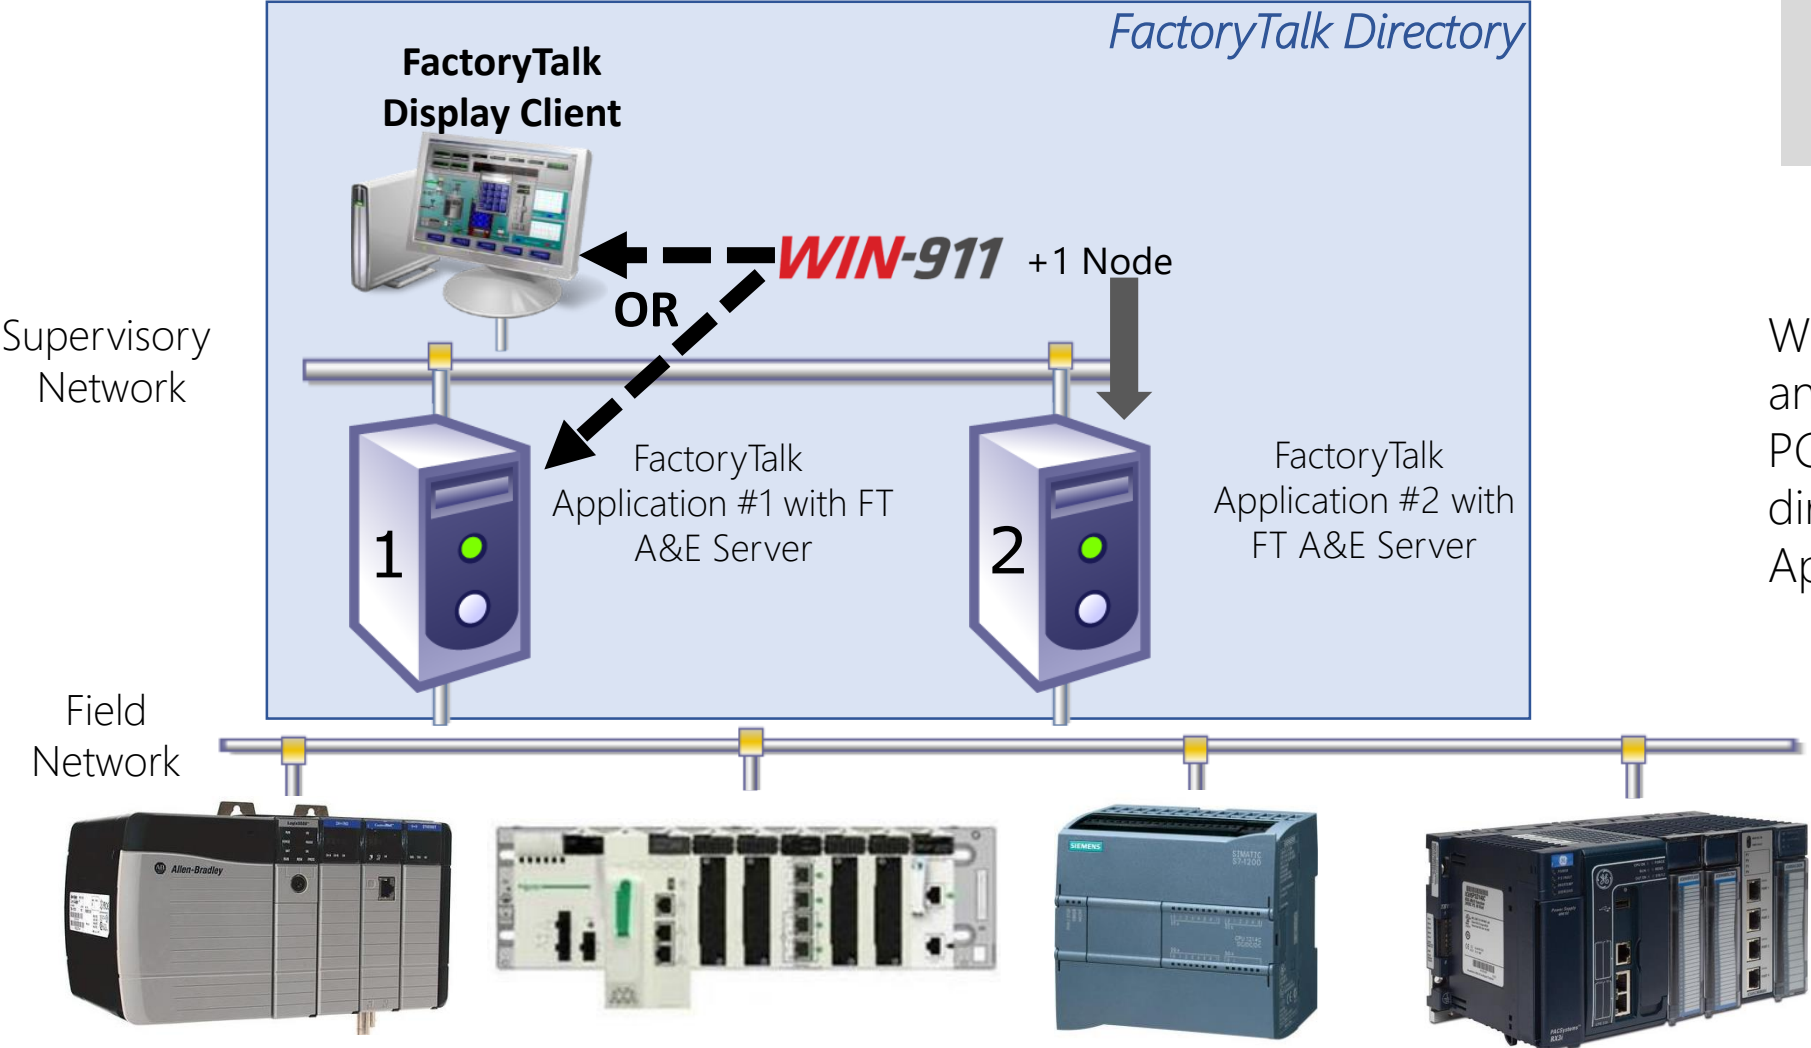


WIN-911 can be installed on any FT server, display client, or PC within the same FactoryTalk directory as the two separate Applications.

FactoryTalk

FactoryTalk Recommended Architecture

Redundant FactoryTalk Applications with Redundant WIN-911 system

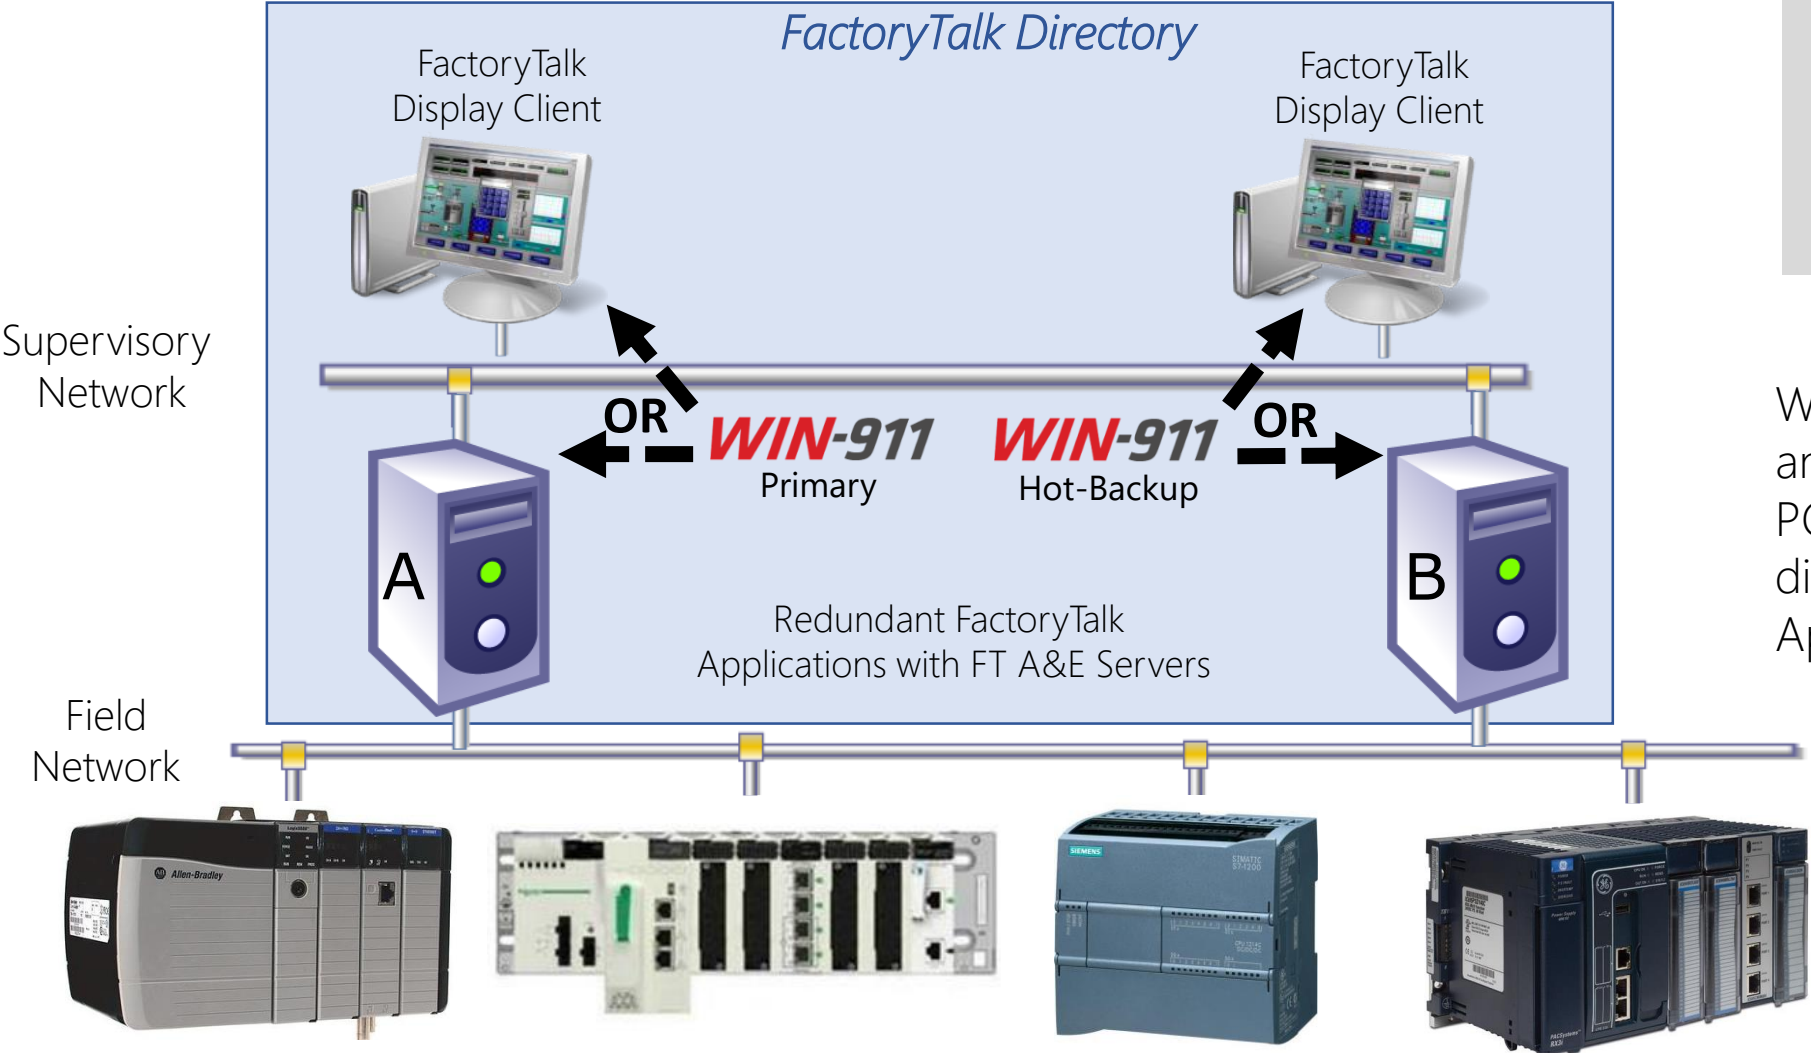

What's Required?

- (1) WIN-911 License
- +
- (1) WIN-911/FT add-on
- +
- (1) WIN-911-HB License
- +
- (1) WIN-911/FT-HB add-on

WIN-911

WIN-911 can be installed on any FT server, display client, or PC within the same FactoryTalk directory as the Redundant Applications.

FactoryTalk